


3788/4163 Strike

Metal Door, LHR Shown, RHR Opposite

- For metal frames:
Drill and tap for #10-24 screw or drill $\frac{9}{64}$ " (4 mm) Dia. (2 holes)

- For wood frames:
Drill $\frac{9}{64}$ " (4 mm) Dia. x $1\frac{1}{4}$ " (32 mm) deep (2 holes)

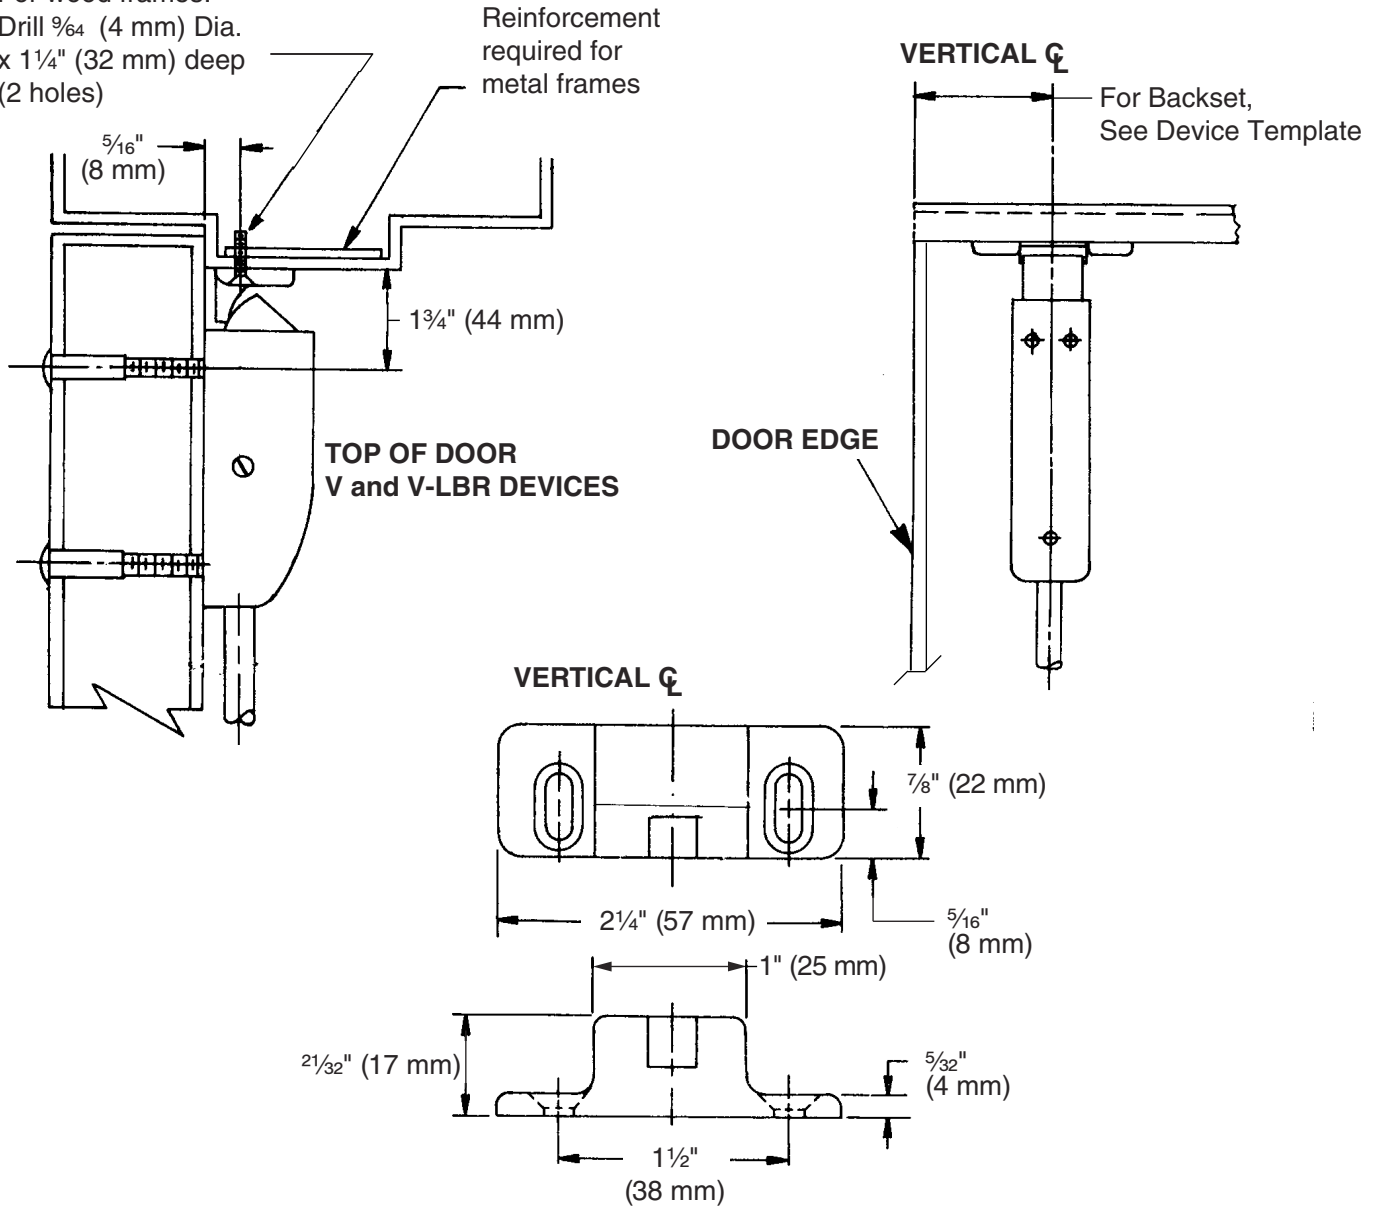

- For device function and other dimensions, see appropriate device or trim templates.

TEMPLATE
T-3032-a